

# Operating and Service Manual

## Agilent Technologies 85033C 3.5 mm Calibration Kit



**Agilent Technologies**

**Manufacturing Part Number: 85033-90007**

**Printed in USA**

**Print Date: May 1990**

©Agilent Technologies, Inc. 1990 All rights reserved.



85033-90007

---

## Hewlett-Packard to Agilent Technologies Transition

This documentation supports a product that previously shipped under the Hewlett-Packard company brand name. The brand name has now been changed to Agilent Technologies. The two products are functionally identical, only our name has changed. The document still includes references to Hewlett-Packard products, some of which have been transitioned to Agilent Technologies.

For the latest information on Agilent's test and measurement products, go to: [www.agilent.com/find/products](http://www.agilent.com/find/products).

In the U.S., call Agilent Technologies at 1-800-452-4844.

---

## Documentation Warranty

THE MATERIAL CONTAINED IN THIS DOCUMENT IS PROVIDED "AS IS," AND IS SUBJECT TO BEING CHANGED, WITHOUT NOTICE, IN FUTURE EDITIONS. FURTHER, TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, AGILENT DISCLAIMS ALL WARRANTIES, EITHER EXPRESS OR IMPLIED WITH REGARD TO THIS MANUAL AND ANY INFORMATION CONTAINED HEREIN, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. AGILENT SHALL NOT BE LIABLE FOR ERRORS OR FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES IN CONNECTION WITH THE FURNISHING, USE, OR PERFORMANCE OF THIS DOCUMENT OR ANY INFORMATION CONTAINED HEREIN. SHOULD AGILENT AND THE USER HAVE A SEPARATE WRITTEN AGREEMENT WITH WARRANTY TERMS COVERING THE MATERIAL IN THIS DOCUMENT THAT CONFLICT WITH THESE TERMS, THE WARRANTY TERMS IN THE SEPARATE AGREEMENT WILL CONTROL.


---

## DFARS/Restricted Rights Notice

If software is for use in the performance of a U.S. Government prime contract or subcontract, Software is delivered and licensed as "Commercial computer software" as defined in DFAR 252.227-7014 (June 1995), or as a "commercial item" as defined in FAR 2.101(a) or as "Restricted computer software" as defined in FAR 52.227-19 (June 1987) or any equivalent agency regulation or contract clause. Use, duplication or disclosure of Software is subject to Agilent Technologies' standard commercial license terms, and non-DOD Departments and Agencies of the U.S. Government will receive no greater than Restricted Rights as defined in FAR 52.227-19(c)(1-2) (June 1987). U.S. Government users will receive no greater than Limited Rights as defined in FAR 52.227-14 (June 1987) or DFAR 252.227-7015 (b)(2) (November 1995), as applicable in any technical data.

**OPERATING AND SERVICE MANUAL**

**HP 85033C  
3.5 mm  
CALIBRATION KIT**

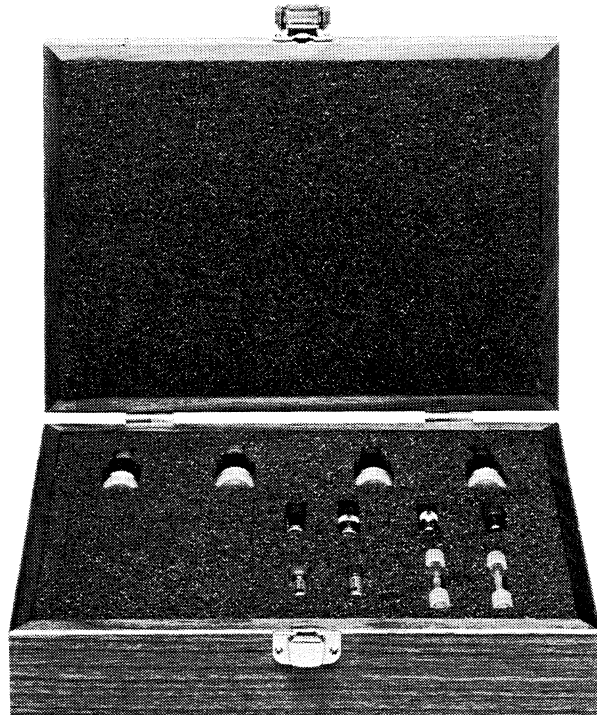

**HEWLETT  
PACKARD**

## **CERTIFICATION**

*Hewlett-Packard Company certifies that this product met its published specifications at the time of shipment from the factory. Hewlett-Packard further certifies that its calibration measurements are traceable to the United States National Institute of Standards and Technology (NIST, formerly NBS), to the extent allowed by the Institute's calibration facility, and to the calibration facilities of other International Standards Organization members.*

## **WARRANTY**

This Hewlett-Packard instrument product is warranted against defects in material and workmanship for a period of one year from date of delivery. During the warranty period, Hewlett-Packard Company will, at its option, either repair or replace products which prove to be defective.

For warranty service or repair, this product must be returned to a service facility designated by HP. Buyer shall prepay shipping charges to HP and HP shall pay shipping charges to return the product to Buyer. However, Buyer shall pay all shipping charges, duties, and taxes for products returned to HP from another country.

HP warrants that its software and firmware designated by HP for use with an instrument will execute its programming instructions when properly installed on that instrument. HP does not warrant that the operation of the instrument, or software, or firmware will be uninterrupted or error free.

### **LIMITATION OF WARRANTY**

The foregoing warranty shall not apply to defects resulting from improper or inadequate maintenance by Buyer, Buyer-supplied software or interfacing, unauthorized modification or misuse, operation outside of the environmental specifications for the product, or improper site preparation or maintenance.

**NO OTHER WARRANTY IS EXPRESSED OR IMPLIED. HP SPECIFICALLY DISCLAIMS THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.**

### **EXCLUSIVE REMEDIES**

**THE REMEDIES PROVIDED HEREIN ARE BUYER'S SOLE AND EXCLUSIVE REMEDIES. HP SHALL NOT BE LIABLE FOR ANY DIRECT, INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, WHETHER BASED ON CONTRACT, TORT, OR ANY OTHER LEGAL THEORY.**

## **ASSISTANCE**

*Product maintenance agreements and other customer assistance agreements are available for Hewlett-Packard products.*

*For any assistance, contact your nearest Hewlett-Packard Sales and Service Office. Addresses are provided at the back of this manual.*

# **HP 85033C 3.5 mm CALIBRATION KIT**

## **SERIAL NUMBERS**

This manual applies directly to HP 85033C calibration kits that have serial number prefix 2920A.

For additional serial number information, see "SERIAL NUMBERS" in section 1.

©Copyright                      HEWLETT-PACKARD COMPANY                      1986  
1400 FOUNTAINGROVE PARKWAY, SANTA ROSA, CA 95403 U.S.A.

MANUAL PART NO. 85033-90007

Printed: MAY 1990  
Edition 3



**HEWLETT  
PACKARD**



# TABLE OF CONTENTS

## HP 85033C

### 3.5 mm Calibration Kit

#### SECTION 1. GENERAL INFORMATION

Introduction .....	1-1
Caring for the Calibration Kit .....	1-1
Serial Numbers .....	1-1
Incoming Inspection .....	1-2
Options .....	1-2
Weight .....	1-3
Contents of the HP 85033C Calibration Kit .....	1-3

#### SECTION 2. SPECIFICATIONS

Introduction .....	2-1
Electrical Specifications .....	2-1
Mechanical Specifications .....	2-1
Environmental Specifications .....	2-2
Temperature .....	2-3
Barometric Pressure and Relative Humidity .....	2-3
Verifying Specifications .....	2-3
Calibration Cycle/Recertification .....	2-3
Limited Calibration/Recertification .....	2-4

#### SECTION 3. PREPARATION FOR USE

Introduction .....	3-1
Operating Precautions .....	3-1
Handling And Storage .....	3-1
Electrostatic Discharge .....	3-2
Wear .....	3-2
Visual Inspection .....	3-2
Cleaning Connectors .....	3-2
Recommended Cleaning Supplies .....	3-2
Procedure .....	3-3

#### SECTION 4. CONNECTING THE CALIBRATION DEVICES

Introduction .....	4-1
Performing a Measurement Calibration .....	4-1
Connecting the Open Standards .....	4-1

#### SECTION 5. STANDARD DEFINITIONS

Standard Definition .....	5-1
Standard Class Assignment .....	5-1

# Section 1. General Information

---

## INTRODUCTION

The Hewlett-Packard 85033C 3.5 mm-calibration kit is designed to be used with network analyzer systems such as the HP 8752A or HP 8753A/B/C. The standard HP 85033C kit consists of opens, shorts, 50 ohm terminations and 3.5 mm to 7 mm adapters.

This manual describes the devices in the HP 85033C calibration kit and gives their environmental, mechanical and electrical specifications. It also provides instructions on the care and use of the devices.

## CARING FOR THE CALIBRATION KIT

To obtain optimum performance from this calibration kit, follow these precautions:

- Keep the protective rubber end-caps on the adapters when possible.
- Make connections carefully to avoid misalignment and connector damage.
- Keep connectors free of dirt and metallic particles.
- If you must clean the connectors, try clean compressed air first. Do not use abrasives. If further cleaning is required, refer to "Cleaning Connectors" later in this manual.
- Periodically gage the device connectors using the instructions provided in the *Microwave Connector Care* manual (HP part number 08510-90064)

## SERIAL NUMBERS

A serial number label is attached to this calibration kit. A typical serial number label is shown in Figure 1-1. The first four digits followed by a letter comprise the serial number prefix, the last five digits comprise the sequential suffix which is unique to each calibration kit. To comply with MIL-STD traceability customers may want to identify each device used when calibrating or verifying a system.

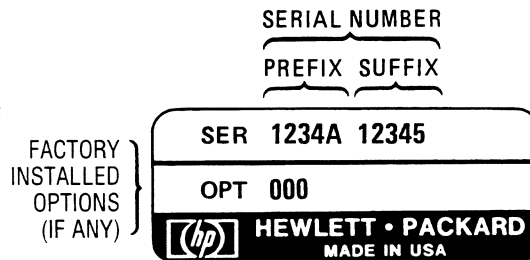


Figure 1-1. Typical Serial Number Label



## **INCOMING INSPECTION**

Use Figure 1-2 to verify that your shipment is complete by matching the HP part number on devices with the part numbers listed.

The foam-lined storage case provides protection for the calibration kit devices during shipping. If the case or devices appear to be damaged, set aside the calibration kit and all packaging materials. Contact the nearest Hewlett-Packard office (listed inside the back cover of this manual). Hewlett-Packard will arrange for repair or replacement of incomplete or damaged shipments without waiting for a settlement from the shipping company.

## **OPTIONS**

There are two options available for the HP 85033C calibration kit.

**Option 001:** This option deletes the 3.5 mm to 7 mm adapters from the calibration kit.

**Option 030:** This option can requested only when the calibration kit is being recalibrated at an HP Service Center. For more information on this option see "LIMITED CALIBRATION/ RECERTIFICATION" on page 2-4 of this manual.











			
85052-60004*		85052-60003*	
			
1250-1766		1250-1767	
			
1250-1784		1250-1785	
			
1250-1768		1250-1769	
			
00909-60007		00909-60016	
*not supplied with option 001			
Part or Model Number	Quantity	Description	
85052-60004	2	7 mm to 3.5 mm (m) 50Ω adapter (not included with option 001)	
85052-60003	2	7 mm to 3.5 mm (f) 50Ω adapter (not included with option 001)	
1250-1766	1	3.5 mm (m) 50Ω Open Circuit with Center Conductor Extender	
1250-1784	1	3.5 mm (m) 50Ω Center Conductor Extender (available separately)	
1250-1767	1	3.5 mm (f) 50Ω Open Circuit with Center Conductor Extender	
1250-1785	1	3.5 mm (f) 50Ω Center Conductor Extender (available separately)	
1250-1768	1	3.5 mm (m) 50Ω Short	
1250-1769	1	3.5 mm (f) 50Ω Short	
00909-60007	1	3.5 mm (m) 50Ω Termination	
00909-60016	1	3.5 mm (f) 50Ω Termination	
85033-80002	1	Storage Case	
85033-80008	1	Limited Calibration Label (not shipped with calibration kit)	
85033-80003	1	Storage Case Pad	

Figure 1-2. Contents of the HP 85033C Calibration Kit

## WEIGHT

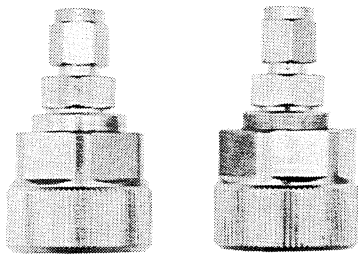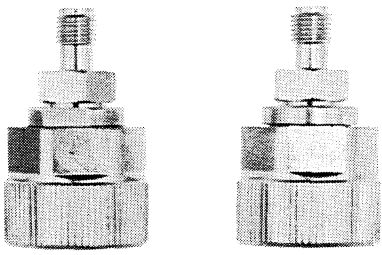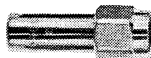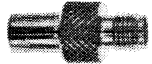Net	0.8 kg (1.8 lb)
Shipping	1.4 kg (3.1 lb)

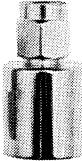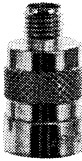

## Section 2. Specifications

---

### INTRODUCTION

This section gives the electrical, environmental and mechanical specifications for the devices in the calibration kit.

### ELECTRICAL SPECIFICATIONS

The electrical specifications and characteristics of the devices in the calibration kit are listed in table 2-1.

*Table 2-1*

<b>Device</b>	<b>Specification</b>	
3.5 mm (m) 50Ω Termination and 3.5 mm (f) 50Ω Termination*	DC to 3 GHz	Return Loss $\geq$ 40 dB
	3 to 6 GHz	Return Loss $\geq$ 35 dB
	6 to 26.5 GHz	Return Loss $\geq$ 24 dB

\*Typical resistance change:  $\pm$  130 ppm/°C

### MECHANICAL SPECIFICATIONS

Table 2-2 shows the pin depth specifications for the devices in the calibration kit.

*Table 2-2. Pin Depth Specifications*

<b>Device (or connector)</b>	<b>Specification</b>
All 3.5 mm connectors in this kit (male or female) 7 mm end of type-N to 7 mm adapters*	Center conductor recession = 0.0 to 0.003 inch Center conductor recession with collet removed = 0.0 to 0.003 inch

\*Not supplied in option 001

Figure 2-1 shows the dimension specified for the 3.5 mm connector.

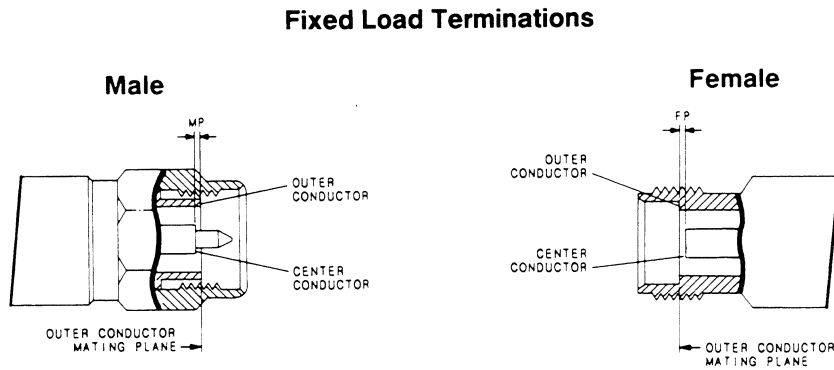


Figure 2-1. 3.5 mm Center Conductor Recession

## ENVIRONMENTAL SPECIFICATIONS

Table 2-3 lists the environmental specification for the devices in the calibration kit.

Table 2-3. Environmental Specifications

Calibration Temperature Range	+15° to +35°C (+59° to +95°F)
Storage Temperature Range	-40° to +75°C (-40° to +167°F)
Barometric Pressure	
Operation	<4,500 meters (15,000 feet)
Storage	<15,000 meters (50,000 feet)
Relative Humidity	
Operation	Non-condensing at all times 0 to 80% (26°C maximum dry bulb temperature)
Storage	0 to 95%

## **TEMPERATURE**

Temperature of the calibration devices is important because device dimensions (and therefore electrical characteristics) change with temperature. The temperature of the calibration devices and all connectors must be stable before use and within the operating tolerances shown above.

Remember that your fingers are a heat source, so avoid unnecessary handling of the devices during calibration.

## **Barometric Pressure and Relative Humidity**

Barometric pressure and relative humidity affect device performance. Air exists between the inner and outer conductors of devices in this kit and the dielectric constant of air varies as pressure and humidity change.

## **VERIFYING SPECIFICATIONS**

For each of the devices in the calibration kit, Hewlett-Packard establishes a traceable link to the United States National Institute of Standards and Technology (NIST, formerly NBS). This is accomplished by electrical comparison between devices in the calibration kit and factory reference standards.

The physical dimension of these factory standards are precisely measured and then their theoretical expected performance is determined. This method establishes a traceable link to NIST for Hewlett-Packard to the extent allowed by the Institutes's calibration facility.

## **CALIBRATION CYCLE/RECERTIFICATION**

Hewlett-Packard recommends that, under normal usage, you calibrate your calibration kit annually. Normal usage is considered to be up to two instrument calibrations per day. Kits that receive higher usage may require recertification more often. Whenever you suspect that your calibration kit is aging or wearing out of specification, contact your nearest Hewlett-Packard Service Center about recertifying your kit.

## LIMITED CALIBRATION/RECERTIFICATION

The 50 ohm terminations in this verification kit are specified up to 26.5 GHz. However, the calibration kit's other devices are designed for use below 6 GHz. When an HP 85033C calibration kit is recalibrated by a Hewlett Packard Service center, it will be assumed that the calibration kit is being used for applications below 6 GHz. Therefore, the 50 ohm loads will not be repaired or replaced based on their performance above 6 GHz. If you need the performance above 6 GHz, be sure to alert the service center to this fact.

If the calibration kit is being used with an HP 8752 or a standard HP 8753, the performance of the 50 ohm load above 3 GHz will not affect the accuracy of calibrated measurements. Therefore, repair or replacement of a 50 ohm termination which fails to meet its specifications above 3 GHz is an unneeded expense. To address this situation, a limited calibration is available.

A standard recertification will test and calibrate the devices in the calibration kit up to 6 GHz. You can request a limited calibration which would recertify the calibration kit devices up to 3 GHz. The limited calibration can extend the effective life of the calibration kit. (As the devices age and the connectors wear with use, it is likely that their performance will degrade at higher frequencies before the performance below 3 GHz is affected.)

To request a limited calibration make sure the following is clearly written on the order:

*Limited Calibration DC-3GHz (option 030)*

All loads which have a limited calibration will have a limited calibration label applied to the back of the device.

## Section 3. Preparation for Use

---

### INTRODUCTION

This section explains how to care for the calibration devices and prepare them for use.


### OPERATING PRECAUTIONS

Following the precautions in the next paragraphs will protect the devices in this kit and the instruments with which they are used.

### HANDLING AND STORAGE

Handle and store these devices with great care. Their continued performance and accuracy depend on maintaining very precise mechanical tolerances.

When the calibration devices are not in use, replace the protective end caps and store them in the foam lined storage case. As shown in Figure 3-1, the storage case lid is detachable so that the case can be stored in a shallow drawer.

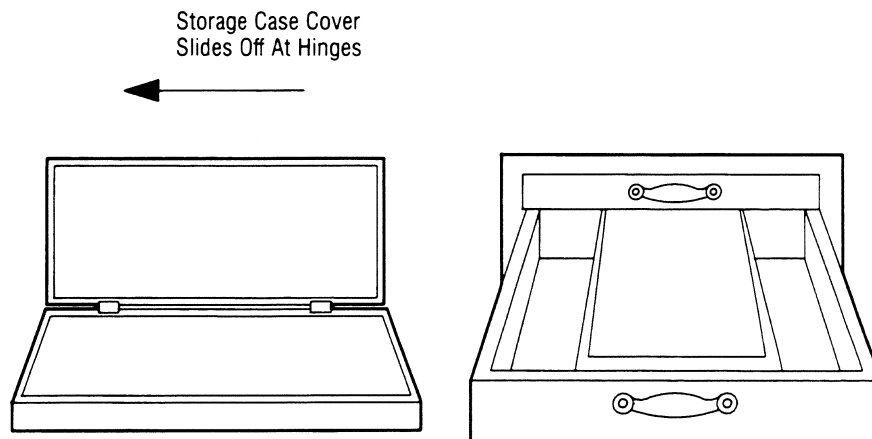

*Figure 3-1. Removing Storage Case Cover*



## **ELECTROSTATIC DISCHARGE**

When handling any device which is attached to static sensitive circuits take all necessary precautions to protect against electrostatic discharge (ESD).



**ESD as low as 60 volts can destroy sensitive microcircuits. Always wear a grounding wrist strap connected to a conductive bench mat when working near sensitive equipment. The human body almost always has some static charge. You are usually not aware of this charge because the human threshold for the perception of a static discharge shock is approximately 3,000 volts.**

## **WEAR**

The life of the calibration devices is dependent upon use. Connector wear eventually degrades performance.

## **VISUAL INSPECTION**

Visually inspect and, if necessary, clean all connectors each time a connection is made. Metal particles from the connector threads may become lodged on the mating plane surfaces. Do not use damaged connectors. A damaged connector can destroy a good connector on the very first mating.

## **CLEANING CONNECTORS**

Cleaning connectors improperly can result in measurement instability that lasts for several days. Please read the following:

### **Recommended Cleaning Supplies**

**Foam Swabs** (HP part number 9300-1270) are preferred over cotton. Cotton swabs leave strands inside the connector, which may have an affect on your measurements.

**Isopropyl Alcohol** is now recommended rather than Freon because of environmental considerations.

**Compressed Air** from an air compressor is the only environmentally safe source of compressed air. If you use an air compressor, be sure it is a model the produces clean, pure air without traces of oil or moisture. All types of "air in a can" contain flourocarbons, which damage the Earth's ozone layer.

## **Procedure**

**Important:** Apply alcohol only to the swab, do not pour or spray alcohol directly into the connector.

1. Apply enough alcohol to the swab to wet it. Do not soak the swab completely or alcohol will run into the connector.
2. Wipe the connector threads gently to clean then. Insert the swab carefully when cleaning interior threads. Use an illuminated magnifying lense or microscope to see the areas being cleaned.
3. Blow the connector dry with compressed air.
4. If your instrument or device shows signs of measurement inaccuracy after cleaning, lay it aside for two or three days before using it again.



## Section 4. Connecting the Calibration Devices

---

### INTRODUCTION

This section provides instructions for using the calibration kit devices with network analyzer systems such as the HP 8752 or 8753.

If a test set with DC bias is used, be sure that bias power is OFF before connecting or disconnecting a device. Avoid electrostatic discharge by wearing a grounded wrist strap. Also, it is good practice to grasp the outer shell of the test port just before you make any connection to the test set. This discharges any static electricity on your body by providing a conductive path to earth ground.

### PERFORMING A MEASUREMENT CALIBRATION

The network analyzer system usually provides prompts to help the user through a measurement calibration. Note that the network analyzer may be compatible with several different calibration kits. Make sure the 3.5 mm calibration kit is selected (in the select cal kit menu) before starting a calibration with the HP 85033C.

### CONNECTING THE OPEN STANDARDS

The open standards in the HP 85033C Calibration Kit consist of two parts. The open circuit outer conductor and the center conductor extender need to be used together. Refer to Figure 1-2 for illustrations and part numbers.

When using the open standard, be careful to select the center conductor extender which will mate correctly with the test port connector. The proper technique is to connect the outer conductor first. Then insert the center conductor extender into the outer conductor. Push gently until the center conductors mate. To disconnect the open, always remove the center conductor extender first. Then remove the outer conductor.



## Section 5. Standard Definitions

### STANDARD DEFINITIONS

STANDARD		C0 $\times 10^{-15}F$	C1 $\times 10^{-27}F/Hz$	C2 $\times 10^{-36}F/Hz$	C3 $\times 10^{-45}F/Hz$	FIXED OR SLIDING	OFFSET			FREQUENCY (GHz)		COAX or WAVEGUIDE	STANDARD LABEL
NO.	TYPE						DELAY ps	LOSS M $\Omega$ /s	Z <sub>0</sub> $\Omega$	MINIMUM	MAXIMUM		
1	SHORT						16.695	1300	50	0	999	COAX	SHORT
2	OPEN	53	150	0	0		14.491	1300	50	0	999	COAX	OPEN
3	LOAD					FIXED	0	1300	50	0	999	COAX	BROAD- BAND
4	DELAY/ THRU						0	1300	50	0	999	COAX	THRU
5													
6													
7													
8													

### STANDARD CLASS ASSIGNMENTS

	A	B	C	D	E	F	G	STANDARD CLASS LABEL
S <sub>11</sub> A	2							OPEN
S <sub>11</sub> B	1							SHORT
S <sub>11</sub> C	3							LOAD
S <sub>22</sub> A	2							OPEN
S <sub>22</sub> B	1							SHORT
S <sub>22</sub> C	3							LOAD
Forward Transmission	4							FWD. TRANS THRU
Reverse Transmission	4							REV. TRANS THRU
Forward Match	4							FWD. MATCH THRU
Reverse Match	4							REV. MATCH THRU
Response	1	2	4					RESPONSE
Response & Isolation	1	2	4					RESPONSE & ISOL'N

The two tables on this page list the characteristics (standard definitions and standard class assignments) of the devices in this calibration kit. The information in these tables also resides in EEPROM in the HP 8753 and 8752. Use these tables with the calibration procedure described in the Reference section of the network analyzer operating manual.